


User Manual

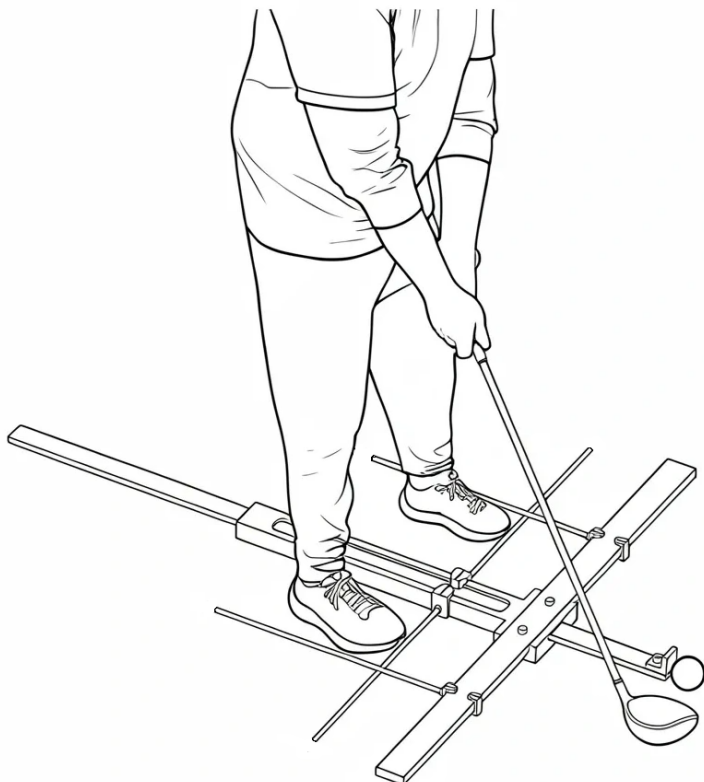


*"How far should I stand from the ball —
and where should my feet be for this club, for this shot?"*

Your setup is the foundation of your swing. Distance from ball, ball position, foot spread, stance alignment — these inter-related variables change club to club, shot to shot, and over time as your body changes. Impact stickers on your clubface reveal the optimal positioning for your purest strikes. The Pre Shot Golf system gives you the precise measurements to find that position, lock it in, and repeat it for every club in your bag.



WHATS IN THE BAG

Remove all parts from the carry bag and check to see that all parts are present below. If something is missing contact the vendor or Pre Shot directly.

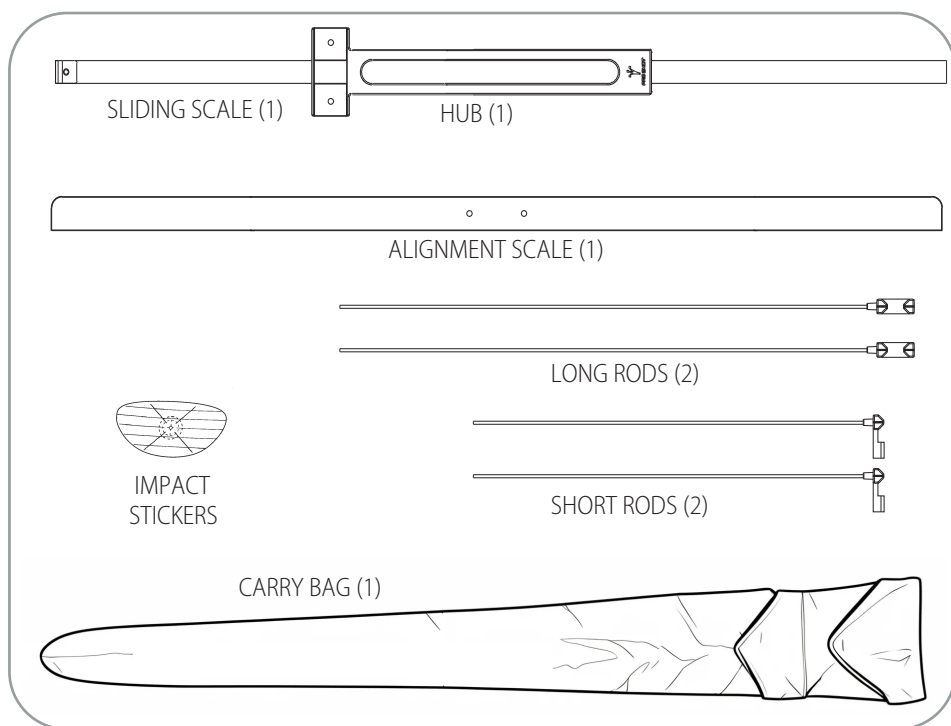

INTRODUCTION

Thank you for purchasing the Pre-Shot Golf! This product is made of high quality materials and is intended to last. ***Read all instructions provided in this manual.***

How The System Works (*Discover... Record... Repeat*)


Discover Apply an impact sticker to your clubface. Straddle the hub with the alignment scale pointing at your target and assume your normal positioning and stance for that club. Using your clubhead move the Tab on the Sliding Scale so that it touches the ball. Record the measurement then retract the sliding scale at least 6 inches so that you can swing freely. Swing, then read the impact sticker tracing — if off the toe, move closer; if near the hosel, step back. Repeat until you achieve pure center-face contact, club by club.

Record Once your impact is consistently pure, record your exact setup for all guides in the companion app — distance from ball, foot position, ball placement, tee height, shot shape, and reference photos — for every club.

Repeat Return to your optimal, evidence-based setup on command on the range or on the golf course. After a two-week break when the feeling is gone. Your optimal setup is always one tap away.

SIMPLE PRINCIPLE

Understanding the principle behind the Pre-Shot Golf training aid is simple but vital to improving your golf swing. When first using the Pre-Shot Golf record your current stance and club impacts on the app. Over time shift your foot positions and distance away from the ball incrementally and observe how these changes effect the quality of your club impacts (see the example below).

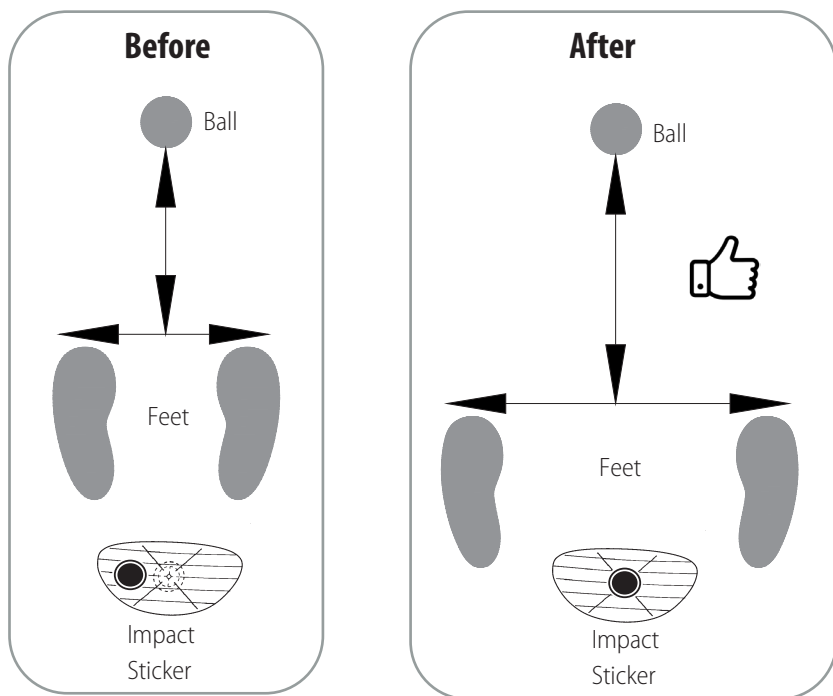

SAFETY LANGUAGE

This instruction manual uses the following safety alert symbols and words to alert you to situations and your risk of personal injury or property damage.

▲ **NOTICE:** Indicates *may* result in **injury or property damage**.


PRODUCT USE

- Your product is designed for use in a variety of outdoor environments.
- **DO NOT** use indoors (unless inside a golf-specific indoor environment).
- **DO NOT** let children come into contact with the product -supervision is required when inexperienced operators use this product.
- **DO NOT** use this product for purposes other than its intended use.
- **ALWAYS** inspect the device for cracks and fractures before and after each use - if any are found, remove from service immediately.




ASSEMBLY


1. Place HUB on the ground with HUB SLOT facing up and position ALIGNMENT SCALE on the HUB BRACE with VERTICAL GUIDES facing toward HUB.

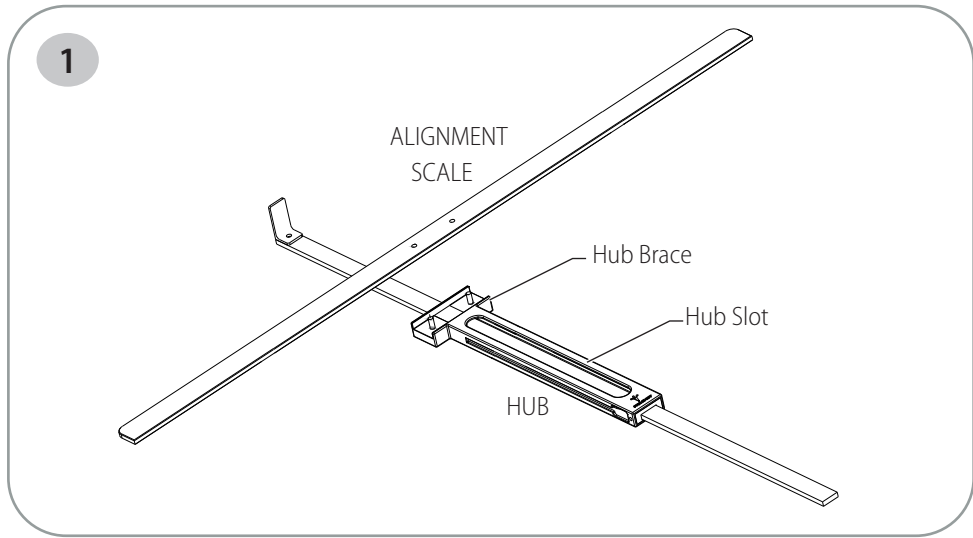

2. Align CENTER HOLES in ALIGNMENT SCALE with PINS on HUB BRACE and push ALIGNMENT SCALE securely into HUB BRACE.

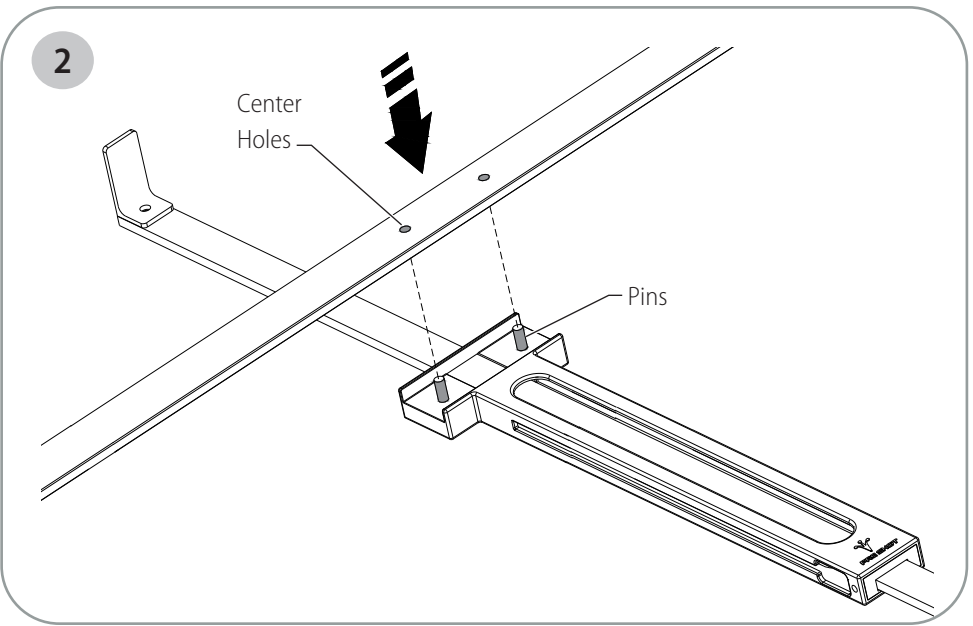


3. Slide VERTICAL GUIDES onto ALIGNMENT SCALE and insert HORIZONTAL GUIDES in Slots on each side of the HUB.

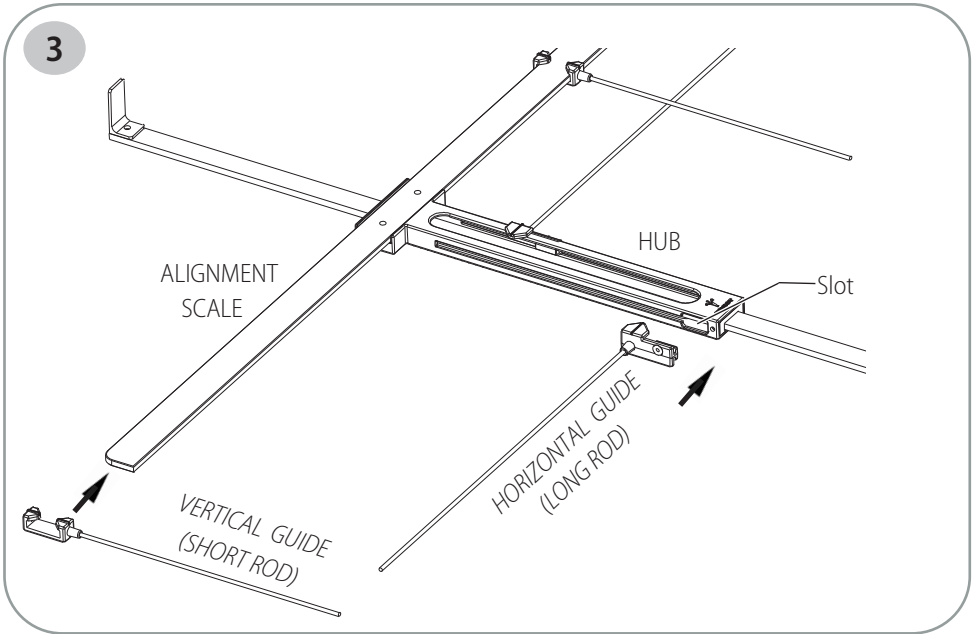


PREPARATION FOR USE

1. Access the Pre-Shot Golf app from the website preshotpro.app, sign up for an account, add your clubs and setup positions.

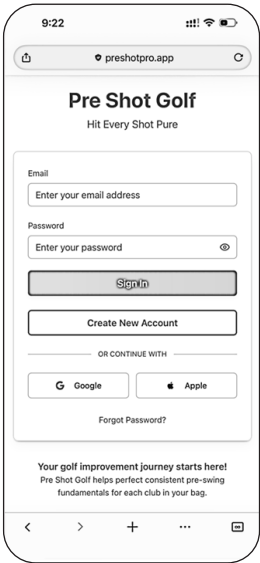

Access the App

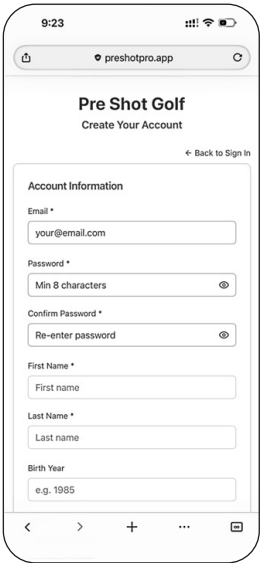


Create an Account




Add a Club

2. Apply an impact sticker to your clubface. Straddle the hub with the ALIGNMENT SCALE pointing at your target and assume your normal positioning and stance for that club.

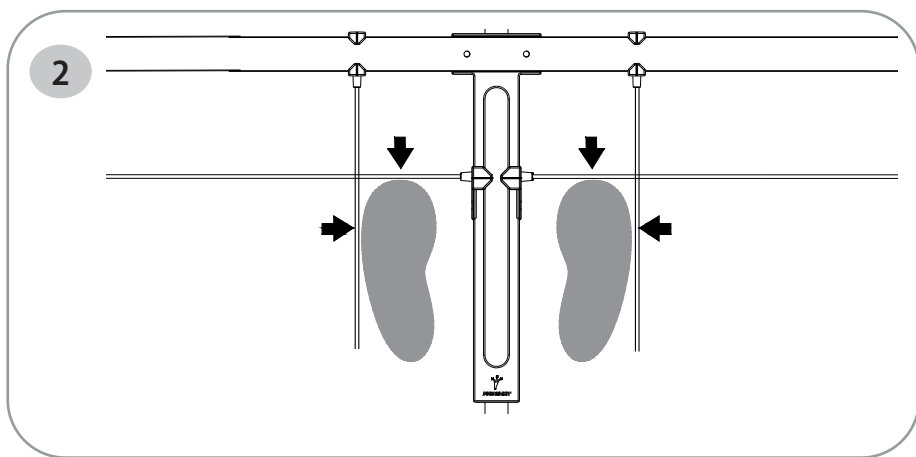

3. Using your clubhead move the Tab on the SLIDING SCALE so that it touches the ball. Record the measurement then retract the SLIDING SCALE at least 6 inches so that you can swing freely. Swing, then read the impact sticker tracing — if off the toe, move closer; if near the hosel, step back. Repeat until you achieve pure center-face contact, club by club.

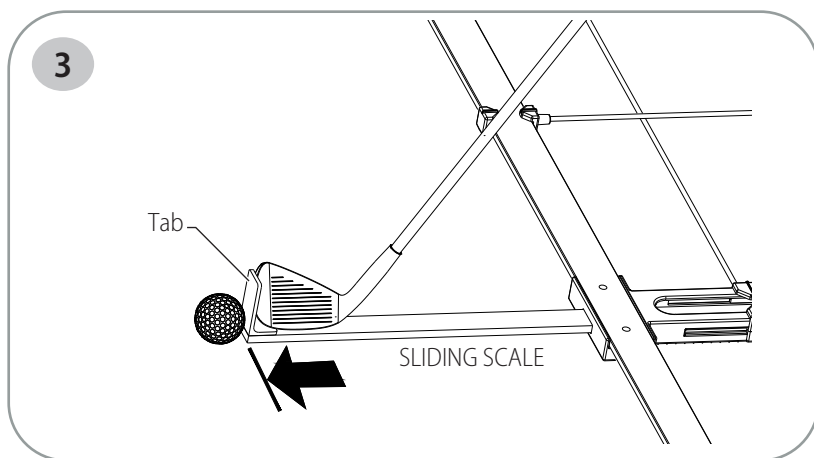

4. Record ball position and distance from ball for each foot into the app.

4

Ball Position

3.5in.

19.5in.

4in.

Distance from Ball

NOTE: Take care when exiting the Pre-Shot Golf to avoid tripping or falling.

9:44

preshotpro.app

Add Setup

Turf or Tee: ☐ Turf ☒ Tee

Tee Height:

Ball/Clubhead Gap: ☐ No Gap

Shot Type *
☒ Straight

Alignment Direction *
☒ Straight

Shot Distance
 yards

Distance from Ball

Left foot:

Right foot:

Ball Position

Left foot:

Right foot:

Notes
Make note of visual cues and other

5. Complete your swing and check the impact sticker for accuracy. Repeat this process for several swings until you arrive at a pure impact for this stance and club. Then repeat with different clubs and record your setups in the app.

9:45

preshotpro.app

Pitching Wedge

Titleist

1 setup

Straight - Tee

Turf or Tee: Tee • Tee Height: 3/8" •

Ball/Clubhead Gap: No Gap

Alignment: Straight

Shot Distance: 110 yards

Distance from Ball

Left: 19 1/4" Right: 19 1/4"

Ball Position

Left: 14 1/2" Right: 3 5/8"

Distance to Ball

19 1/4"

19 1/4"

14 1/2"

3 5/8"

New Setup

6. Add additional swing setups for each club in future range sessions to build a Pre-Shot library. Recall past swing and condition profiles so that you can preset your stance before swings for continual improvement.

MAINTENANCE

- Use soap and water to clean the Pre-Shot Golf - never use harsh chemicals.
- Remove any dirt and debris from the bottom of the hub to keep spikes clean.
- Remove any dirt and debris from all sliders to keep them moving freely.

WARRANTY

The Product is warranted to the original purchaser to be free from defects in materials and workmanship under normal and intended use for a period of one (1) year from the date of purchase. If a defect in materials or workmanship is found during the warranty period, the manufacturer, at its sole discretion, will repair or replace the defective Product or component. This warranty does not cover damage resulting from misuse, abuse, improper installation, modification, unauthorized repairs, accidents, normal wear and tear, exposure to harsh chemicals, excessive heat, impacts, improper maintenance, or use in a manner inconsistent with the Product instructions or intended purpose. Because operating conditions, mounting methods, equipment configurations, and user practices are beyond the manufacturer's control, no warranty is made regarding fitness for a particular purpose or compatibility with any specific equipment beyond that expressly stated. To the maximum extent permitted by law, the manufacturer shall not be liable for any indirect, incidental, special, consequential, or punitive damages arising from the use or inability to use the Product. Proof of purchase may be required for warranty claims. This warranty provides specific legal rights, and additional rights may vary by jurisdiction.

Learn about all the features and the latest updates in the app by scanning the QR Code with your smart phone below. It will take you to a comprehensive video on our website.

